



Cleanroom Management International

*We care for your compliance*



# LogTag<sup>®</sup> USRID-16

## Quickstart Guide

Version A

# Quickstart Guide Contents


---

What's Included	3
Downloading LogTag Analyzer	4
Configuring your USRID-16	6
Starting your USRID-16	7
During Recording	8
Downloading Results	9

# What's Included

---

Please check you have the item shown below before continuing with setting up your USRID-16.

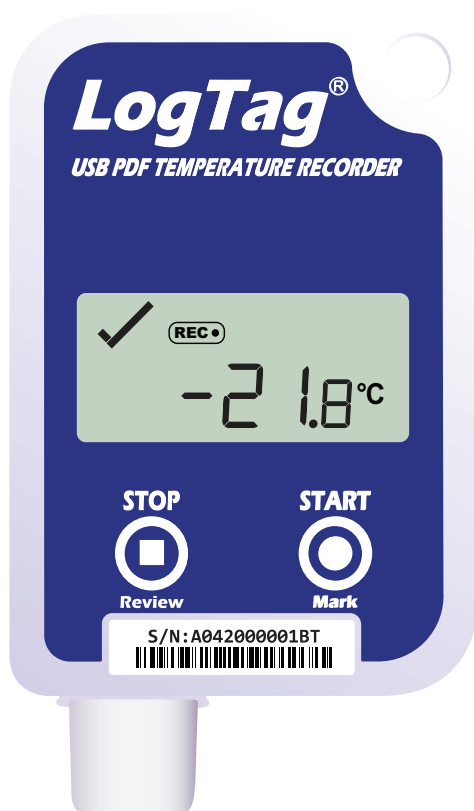

USRID-16

# Downloading LogTag Analyzer

---

To download the latest LogTag Analyzer, open your browser and navigate to:

 <https://logtagrecorders.com/software/LTA3/>

1. Click 'Go to downloads page' to take you to the download page.
2. Click 'Download Now' to start the download. You can fill in your details beneath and click 'subscribe' if you wish to receive email updates from us.
3. Click 'Run' or 'Save File' then double-click the downloaded file to open the LogTag Analyzer Setup Wizard.

**Warning:** Please ensure no other LogTag software is currently running on your computer before running the Analyzer software.

# Downloading LogTag Analyzer continued...

---


4. Follow the on-screen prompts to install LogTag Analyzer.
5. Click 'Finish' to exit the LogTag Analyzer Setup Wizard.

**Note:** If you already have the LogTag Analyzer installed, please see whether you need to update to the latest version by clicking 'Check Internet for updates' from the 'Help' menu.

# Configuring your USRID-16

---


Connect your USRID-16 to the computer via the USB port. The USB socket on the device is located on the bottom, protected by the cap.

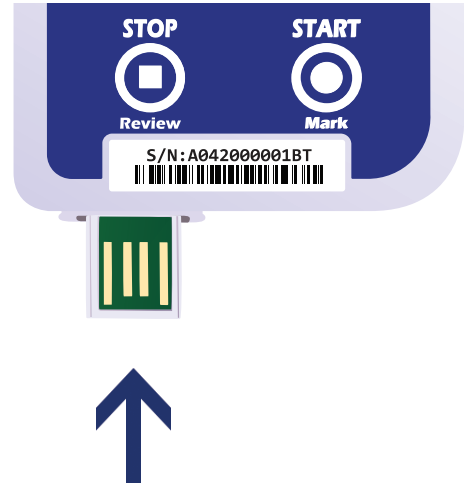

1. Open LogTag Analyzer.
2. Click 'Configure' from the 'LogTag' menu or click the 'Wizard' icon.
3. Adjust your logger configuration settings as required. For more information on configuration settings, please refer to Configuring USRID-16 in the Product User Guide or press 'F1' for help from your keyboard.
4. Click 'Configure' to upload the configuration settings to the logger.
5. Click 'Close' to exit the configuration page.


# Starting your USRID-16

## Display overview:

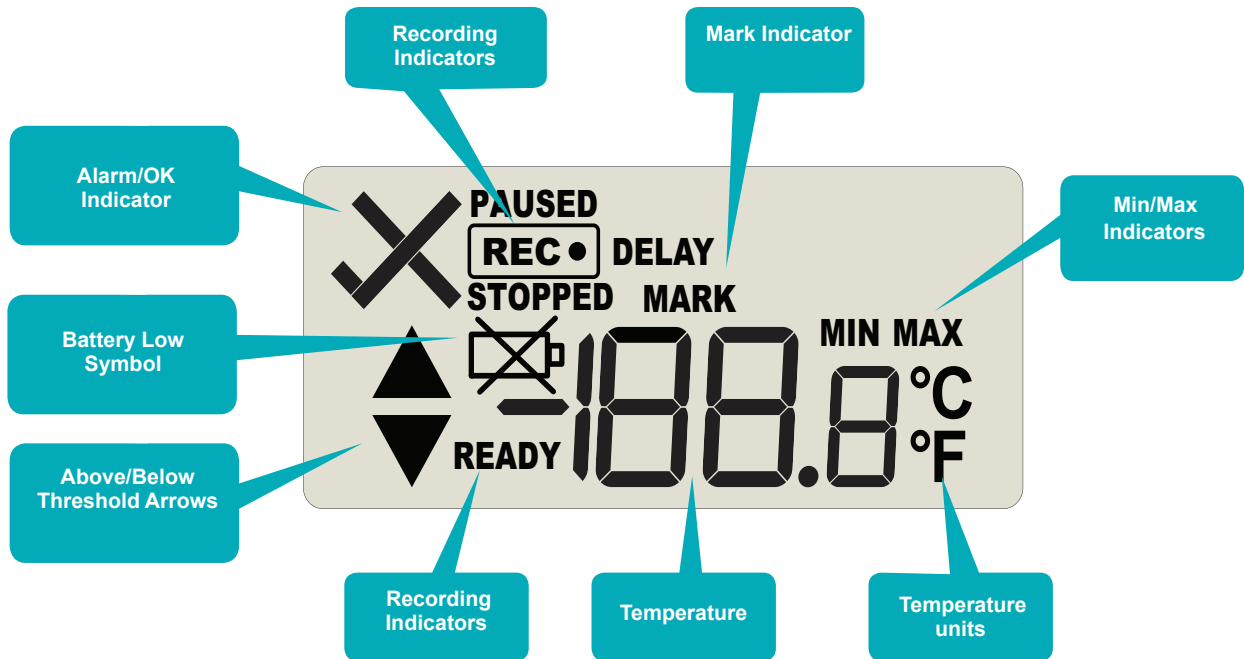

Press and hold the START/MARK button.

REC symbol will appear. Release the button once REC stops flashing.

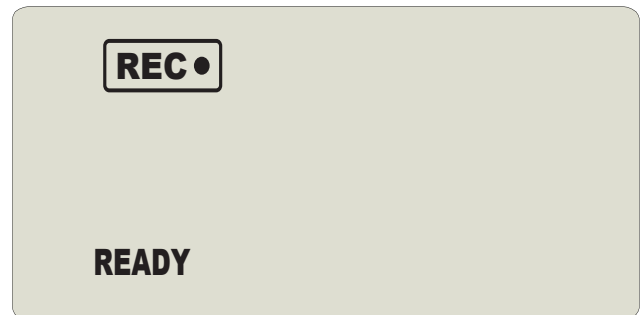

The USRID-16 now records temperature data.



# During Recording

---

To view more information about clearing alarms and reviewing Min/Max trip temperatures, please refer to the Product User Guide.


---

• END OF PAGE



# Downloading Results

Connect your USRID-16 to the computer via the USB port. The USB socket on the device is located on the bottom, protected by the cap.

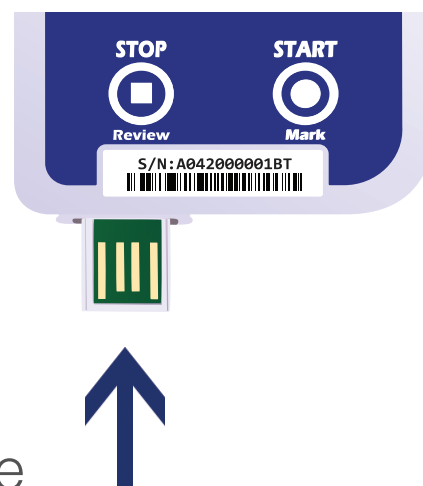

A new device drive will appear in file explorer with the files containing the recorded data.

Alternatively, you can download and view data on [LogTag Analyzer](#).

1. Open LogTag Analyzer.
2. Click 'Download' from the 'LogTag' menu or press F4.
3. Click 'Close' to exit the download page.

By default, auto-download is enabled in LogTag Analyzer so when you open the program, data results will be displayed after connecting your USRID-16 to the computer.

**CMI BELGIUM**  
Avenue de Ramelot 3  
B - 1480 Saintes (Sint Renelde)  
Tel : +32 (0)2 531 11 21  
info@cmitest.com

**CMI THE NETHERLANDS**  
Luchthavenweg 81  
NL - 5657 EA Eindhoven  
Tel : +31 (0)402 88 87 57  
info@cmitest.com

**CMI FRANCE**  
Ecoparc d'Affaires  
F- 41210 Neung-sur-Beuvron  
Tel : +33 (0)2 54 95 70 95  
info@cmitest.com

Agence Rhône Alpes :  
F- 26160 La Bégude-de-Mazenc  
Tel : +33 (0)4 75 54 57 26



[www.cmitest.com](http://www.cmitest.com)