



# EL-GFX-1



## Temperature Data Logger with Graphic Screen

- -30 to +80°C (-22 to +176°F) measurement range
- Stores over 250,000 readings
- EasyLog software available as a free download
- Logging rates between 10 seconds and 1 hour
- On-screen graphing and menu options to start, stop, review and restart the logger in the field
- Immediate, delayed, push button or level triggered start mode
- User-programmable audible alarm thresholds with highly visible confidence/alarm LEDs
- Environmental protection to IP67



This stand-alone data logger measures and stores over 250,000 temperature readings over a -30 to +80°C (-22 to +176°F) range at a resolution of 0.1°C (0.2°F).

The user can easily set up the logger and view downloaded data by plugging the data logger into a PC's USB port and using the free EasyLog software. Data can then be graphed, printed and exported to other applications for detailed analysis.

The data logger features a high contrast dot-matrix LCD and three buttons to navigate through an on-screen menu. This menu provides the user with access to real-time trend analysis, data summaries and the ability to start, stop and restart the data logger without the need to connect the data logger to the host-PC. Users can reset the maximum / minimum reading using the on-screen menu. This introduces an 'event marker' into the data which can later be viewed in the graphing software ('Mark Events' option) and the data file after download.

The data logger is supplied complete with two lithium metal batteries, which can typically allow logging for up to 1 year and is protected against moisture to IP67 when the battery case is securely fitted. Can be powered from USB.

### SPECIFICATIONS

<b>Measurement range</b>	-30 to 80°C (-22 to 176°F)
<b>Accuracy (overall error)*</b>	±0.2°C (±0.4°F) typical
<b>Resolution</b>	0.1°C (0.2°F)
<b>Logging rate</b>	User selectable between 10 seconds & 1 hour
<b>Operating temperature range</b>	-30 to +80°C (-22 to +176°F)
<b>Battery Life</b>	1 year (at 25°C, 1 minute logging rate, LCD off)
<b>Dimensions</b>	88 x 48.5 x 30.5mm (3.46 x 1.90 x 1.20")
<b>Readings</b>	252,928

\* The overall error takes into account the sensor accuracy (as shown on page 3) and the resolution of the datalogger

### ACCESSORIES

<b>BAT 3V6 1/2AA</b>	Replacement battery (2 required)
----------------------	----------------------------------

### INCLUDED IN THE BOX

<b>x2 BAT 3V6 1/2AA</b>	Battery
<b>CABLE USB A-MICRO B</b>	USB cable
<b>EL-GFX WALL BRACKET</b>	Magnetic mounting bracket



### CALIBRATION CERTIFICATES NOW AVAILABLE

Lascar now offers a Traceable Calibration Certificate Service on Temperature Data Loggers. Using reference equipment which has been calibrated by a UKAS/NIST accredited laboratory and using apparatus traceable to national or international standards.



# EL-GFX-1



## Temperature Data Logger with Graphic Screen

### EL-WIN-USB

Lascar's EasyLog control software is available as a free download from [www.easylogusb.com](http://www.easylogusb.com). Easy to install and use, the control software is compatible with 32-bit and 64-bit versions of Windows 7, 8 and 10. The software is used to set up the logger, download, graph and annotate data or export in Excel, PDF and jpeg formats.

The software allows the following parameters to be configured:

- Logger name
- Measurement parameter (°C or °F)
- Logging rate (selectable between 10 seconds and 1 hour)
- Display off, on for 30 seconds after button press, or permanently on
- High and low alarms
- Disable or enable LEDs and sounder with delayed activation
- Immediate, delayed, triggered and push-to-start logging



Download the latest version of the software free of charge from [www.lascarelectronics.com/software/easylog-usb](http://www.lascarelectronics.com/software/easylog-usb)

### MENU BUTTON FUNCTIONS AND LCD SCREEN INDICATION

<p><b>ARMED!</b> Press button to start logging</p> <p><b>DELAYED START</b> Starts logging at 10:30:00 04/03/12</p> <p><b>DELAYED START</b> Starts logging when temperature above 36.2 °C</p>	<p><b>START LOGGER</b></p> <ul style="list-style-type: none"> <li>Loggers can be started immediately on a button press, delayed to a specific time or delayed to specific temperature reading</li> </ul>	<p><b>26.8 °C</b></p> <p><b>26.8 °C</b></p>	<p><b>DISPLAY DATA</b></p> <ul style="list-style-type: none"> <li>Data can be displayed on screen in tabular or graphical format</li> <li>You can switch between these views by pressing the <b>gfx</b> / <b>txt</b> buttons at the bottom-left of your screen</li> </ul>
<p><b>ON-SCREEN ICONS</b></p> <ul style="list-style-type: none"> <li>When the EasyLog cube is shown in the top-left corner your logger is logging</li> <li>High/Low Alarm indicators are displayed at the top of your screen</li> <li>This icon indicates that your battery is low and will need to be replaced soon</li> </ul>		<p><b>STOP/START LOGGING &amp; MUTE ALARM</b></p> <ul style="list-style-type: none"> <li>By pressing the <b>stop</b> button, you can stop your logger, or view logger settings. If you have already stopped logging, this option will change to 'Start Logging'. The audible alarm can be muted from this menu if enabled</li> </ul>	
<p><b>Temperature</b> Max 34.0 °C Min 22.8 °C</p> <p><b>Mem Used</b> 32% Readings 6336</p> <p><b>Since</b> 10:30 24/03/2012</p>		<p><b>SUMMARY DATA</b></p> <ul style="list-style-type: none"> <li>Summary screen displays max/min log and last log. Reset function clears summary if required</li> <li>These screens can be reached by pressing the <b>i</b> button</li> </ul>	
<p><b>EasyLog USB</b> Sample Rate 10s Low Alm 10 °C High Alm 40 °C S/N 00000001</p>		<p><b>LOCKED MODE</b></p> <ul style="list-style-type: none"> <li>When in locked mode - an option during PC set-up - the logger can only be stopped and re-started using a PC loaded with the unit's configuration software</li> </ul>	
<p><b>LOGGER SETTINGS</b></p> <ul style="list-style-type: none"> <li>To view a summary of the logger's settings press the <b>stop</b> button, then click 'Logger Settings'</li> </ul>		<p><b>POP-UP MESSAGES</b></p> <ul style="list-style-type: none"> <li>A message will overlay the screen - if there is an issue - the next time a button is pressed, e.g. if the logger is running low on memory</li> </ul>	


Please note that screens may vary slightly depending on model.

# EL-GFX-1



## Temperature Data Logger with Graphic Screen

### SENSOR ACCURACY

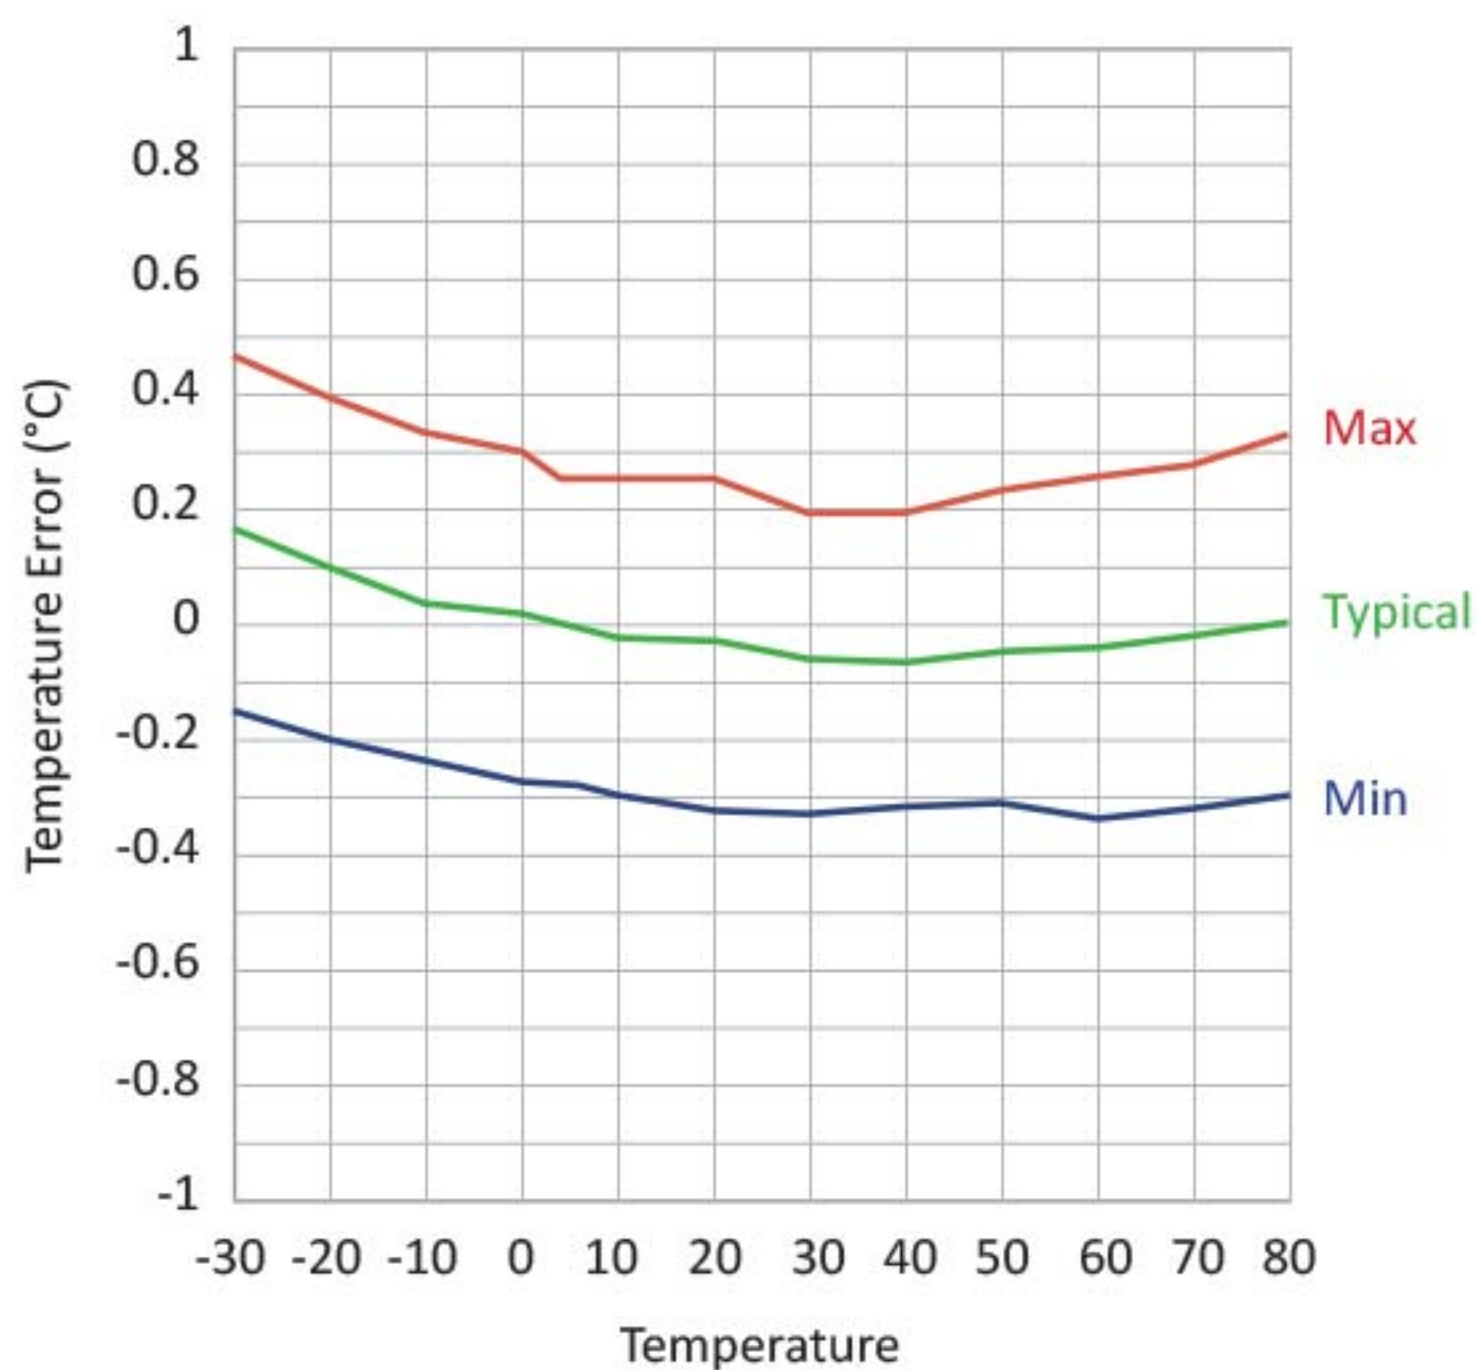

### BATTERY INFORMATION

#### Replacement

We recommend that you replace the battery every year, or prior to logging critical data. Only use 3.6V ½AA lithium batteries. The data logger does not lose its stored readings when the battery is discharged or replaced; however, the data logging process will stop and will not resume until the battery is replaced. The logger may need to be restarted by EL-WIN-USB.

Before replacing the battery, remove the data logger from the PC.

#### Passivation

If left unused for extended periods of time, lithium batteries, including those used in the EasyLog range of data loggers naturally form a non-conductive internal layer, preventing them from self-discharge and effectively increasing their shelf life. When first installed in the data logger, this may cause a momentary drop in the battery voltage (the Transient Minimum Voltage) as the internal layer is broken down, resulting in the data logger resetting. Inserting the batteries in the data logger and leaving it connected to a PC for about 30 seconds will remove this layer. After this, remove and re-install the batteries to reset the data logger. Overall battery life will not be affected.

#### WARNING

Handle lithium batteries carefully, observe warnings on battery casing. Dispose of in accordance with local regulations.



Issue 16 03/2018 Page 3 of 3

#### CMI BELGIUM

Avenue de Ramelot 3  
B - 1480 Saintes (Sint Renelde)  
Tel : +32 (0)2 531 11 21  
info@cmitest.com

#### CMI THE NETHERLANDS

Luchthavenweg 81  
NL - 5657 EA Eindhoven  
Tel : +31 (0)402 88 87 57  
infoNL@cmitest.com

#### CMI FRANCE

Ecoparc d'Affaires  
F- 41210 Neung-sur-Beuvron  
Tel : +33 (0)2 54 95 70 95  
infoFR@cmitest.com

Agence Rhône Alpes :  
F- 26160 La Bégude-de-Mazenc  
Tel : +33 (0)4 75 54 57 26



www.cmitest.com